



TEST REPORT

Super Tentax Waffle

Test item: Bacteria pick-up rate (microorganisms)
ISO standard: 6330:2012
Report no.: DL-180810-1
Test date: 18.07.2018
Issue date: 10.08.2018

Super Tentax Waffle microfiber cloth



2215

For test result please see next page



TEST RESULT

Super Tentax Waffle

Microfiber cloth

| | |
|------------------|---|
| Pick-up rate (%) | Before washing: 99.9% After washing (50 times): 99.9% |
| Test bacteria | Staphylococcus aureus ATCC 6538 (microorganisms). Exists in e.g. kitchens, on kitchen utensils, in foodstuffs and dairy products. Causes: vomit, food poisoning and diarrhea. |
| Art. no. | Art. no. 2215 |

Before wipe:



After wipe:



Calculation of the cloth's capacity to pick up bacteria and microorganisms:

$$\text{Pick-up rate} = [(M_b - M_c) / M_b] \times 100$$

M_b = Average of the number of bacteria on the test surface before pick-up.
(The amount of bacteria which was spread on the surface)

M_c = Average of the number of bacteria on the test surface after pick-up.
(The amount of bacteria on the surface after the wipe)



TEST METHOD

Super Tentax Waffle


Microfiber cloth



Test conditions:

| | |
|-------------------|---|
| Amount of water | 1 time of specimen weight |
| Load weight | 1 kg |
| Surface | Vinyl tile (wax coated) |
| Sliding range | 30 cm |
| Washing condition | Household washing machine, 60 °C Weak alkali detergent 0,2% Washing times: 50 times |

Illustration of the test method:

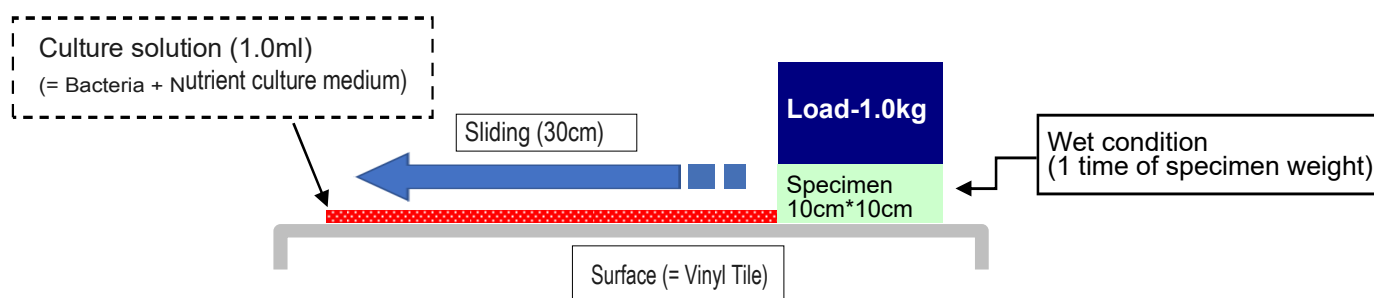

CONCLUSION

Super Tentax Waffle has a documented pickup of microorganisms of min. 99.9%.

The test result is based on test with bacteria within the group of microorganisms, where viruses also are included as a part of this group because of their sizes.

When microfiber product's ability to pick up microorganisms is tested, the size of the test object is pivotal. Thus, it is not important whether the microorganism is a bacterium or a virus. Microfiber does not distinguish between the types of microorganisms when they pick them up. Microfiber's ability to pick up microorganisms varies from product to product.

The tests are always conducted with bacteria within the art of microorganisms because of two reasons:

- 1) Bacteria constitute the most extensive health risk because they multiply and evolve with time.
Viruses disappear after a certain amount of hours.
- 2) Bacteria are more safe to use in tests and they are more accessible as test objects.